

Using the JUKE service

See juke.com for service area information.

Music streaming service JUKE offers access to one of the most comprehensive music libraries in the world. More than 40 Million songs from all genres from more than 80,000 labels are available to you. Enjoy your favorite songs in the best sound quality thanks to Dolby technology and play music wherever and whenever you want. JUKE works as an app on your smartphone and tablet or on the internet at juke.com.

JUKE offer a free, non-binding 7-day test phase to everyone who registers at JUKE for the first time.

To continue using JUKE after the test phase, you can take out a JUKE subscription.

For more information, visit juke.com.

 
NOTE

- If you do not have a JUKE account, please register your account on the web site of JUKE in advance.
- To use this feature, this unit must be registered using the MusicCast CONTROLLER app. See the Owner's Manual for details.
- The actual display may be partly different from display images used on this document depending on the model.
- In this guide, illustrations of English menu screens are used as examples.

JUKE account sign-in

To start using the JUKE service on this unit, sign in to your account using the MusicCast CONTROLLER app installed on your mobile device. Follow the instructions on the app screen.

MusicCast CONTROLLER app

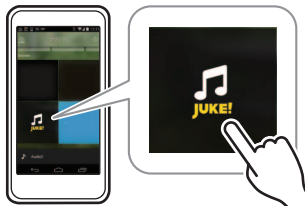


Playback of JUKE contents

Follow the procedure below to operate the JUKE contents and start playback.

1 Press NET repeatedly to select "JUKE" as the input source.

 The browse screen is displayed on the TV.

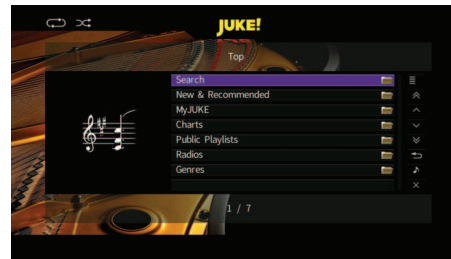


Search	Use the software keyboard to search the desired item (artist, album and track) by keyword.
New & Recommended	Select newly released albums selected by JUKE.
MyJUKE	Select a track from items (artist, album, etc.) added to "MyJUKE". You can edit your playlists "My Mixtapes" on the JUKE website.
Charts	Select TOP albums and tracks.
Public Playlists	Select a Playlist of JUKE (or any other user).
Radios	Select a network radio channel from the lists of the channels provided by JUKE.
Genres	Select an album or a track from genres.

NOTE

- If playback of any JUKE content is ongoing, the playback screen is displayed.
- To return to the Top screen, press and hold RETURN.

2 Use the cursor keys to select an item and press ENTER.

 
If a track or a radio channel is selected, playback starts and the playback screen is displayed.

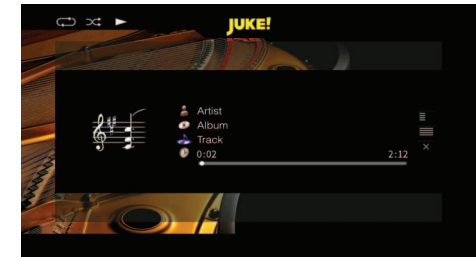

NOTE

- To return to the previous screen, press RETURN.
- Items such as track title are also displayed on the front display. Each time you press INFO, the displayed item changes.

 ■ Browse screen

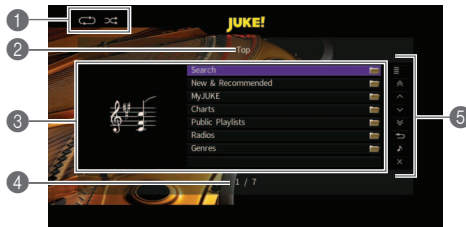

1 Status indicators

Display the current shuffle/repeat settings and playback status (play/pause).

2 List name

3 Content list

Displays the list of JUKE contents.

4 Item number/total

5 Operation menu

Use the cursor keys to select an item and press ENTER to confirm the selection. To close the submenu, press RETURN.


Menu	Submenu	Function
	Play Track (Play Album) (Play Playlist)	Starts playback of the selected track, album or playlist.
☰	Add Track to MyJUKE	Adds the track selected in the list to "MyJUKE".
	Add Album to MyJUKE	Adds the album selected in the list to "MyJUKE".
⬆		Moves to the previous/next page of the list.
⬇		
⬆⬆		Moves to 10 pages forward/backward.
⬇⬇		

Menu	Submenu	Function
↶		Returns to the higher-level list.
🎵		Moves to the playback screen.
✕		Closes the screen display and shows the background. Press one of the menu operation keys to redisplay it.

NOTE

- By adding your favorite JUKE contents to "MyJUKE", you can access to them quickly from "MyJUKE". To remove items from "MyJUKE", select the item in "MyJUKE" and then "Remove Track from MyJUKE" or "Remove Album from MyJUKE" in "☰".
- Submenus available in "☰" vary depending on the list.

 ■ Playback screen

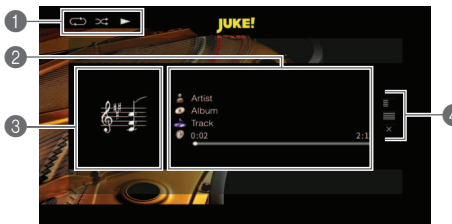

1 Status indicators

Display the current shuffle/repeat settings and playback status (play/pause).

2 Playback information

Displays the artist name, album name, track title and elapsed/total time.

3 Album image

4 Operation menu

Use the cursor keys to select an item and press ENTER to confirm the selection. To close the submenu, press RETURN.

Menu	Submenu	Function
☰	Add Track to MyJUKE	Adds the current track to "MyJUKE".
	Add Album to MyJUKE	Adds the current album to "MyJUKE".

NOTE

- You can also use the external device operation keys (▶, ■, ■, ◀, ▶▶) on the remote control to control playback.

■ Shuffle/repeat settings

You can configure the shuffle/repeat settings for playback of JUKE contents.

1 When "JUKE" is selected as the input source, press OPTION.

2 Use the cursor keys to select "Repeat" or "Shuffle" and press ENTER.

3 Use the cursor keys (</>) to select a setting.



JUKE and JUKE logo are registered trademarks of Media-Saturn-Holding GmbH.

Manual Development Group
© 2017 Yamaha Corporation

Published 02/2017 IP-A0

AV16-0088