

While holding down the applicable button, press one of the highlighted keys or buttons shown below to select a Grand Song or set a parameter.

1 Song playback

To select a Song, follow step ① (Book Select), and then step ② (Song No. Select).

1 Book Select → **2 Song No. Select**

Quick Play **Demo Songs**

DEMO/SONG +

A#1 C#0 D#0 F#0 G#0 A#0 C#1 D#1 F#1 G#1 A#1 C#2 D#2 F#2 G#2 A#2 C#3 D#3 F#3 G#3 A#3 C#4 D#4 F#4 G#4 A#4 C#5 D#5 F#5 G#5 A#5 C#6 D#6 F#6 G#6 A#6

Off On 50 Classics Beyer 1-50 Beyer 101-106 Burgmüller 1-25 Czerny 100, 1-50 Czerny 30, 1-30 Hanon 1-20 Hanon 1-Variation 1-22 CFX Grand Pop Grand DX E.Piano Harpsichord Pipe Organ Strings 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50

A-1 B-1 C0 D0 E0 F0 G0 A0 B0 C1 D1 E1 F1 G1 A1 B1 C2 D2 E2 F2 G2 A2 B2 C3 D3 E3 F3 G3 A3 B3 C4 D4 E4 F4 G4 A4 B4 C5 D5 E5 F5 G5 A5 B5 C6 D6 E6 F6 G6 A6 B6 C7

1 Book	2 Song No.
50 Classical Music Masterpieces (50 Classics)	1-50
Beyer 1-50	1-50
Beyer 51-100	1-50
Burgmüller 1-25	1-25
Czerny 100, 1-50	1-50
Czerny 100, 51-100	1-50
Czerny 30, 1-30	1-30
Hanon 1-20	1-20
Hanon 1-Variation 1-22	21-42

50 Classical Music Masterpieces (Number/Song)

1 Canon D dur	11 Salut d'amour op.12	21 Prelude (Wohlt temperierte Klavier I No.1)	31 Etude op.10-3 "Chanson de l'adieu"	41 Humoresque
2 Air On the G String	12 From the New World	22 Menuett G dur BWV Anh.114	32 Etude op.10-12 "Revolutionary"	42 Arietta
3 Jesus, Joy of Man's Desiring	13 Sicilienne	23 Piano Sonate No.15 K.545 1st mov.	33 Valse op.64-1 "Petit chien"	43 Tango (España)
4 Twinkle, Twinkle, Little Star	14 Clair de lune	24 Turkish March	34 Nocturne op.9-2	44 The Entertainer
5 Piano Sonate op.31-2 "Tempest" 3rd mov.	15 Jupiter (The Planets)	25 Piano Sonate op.13 "Pathétique" 2nd mov.	35 Nocturne KK4a-16/B1 49 [Posth.]	45 Maple Leaf Rag
6 Ode to Joy	16 Menuett (Eine kleine Nachtmusik K.525)	26 Für Elise	36 Träumerei	46 La Fille aux Cheveux de Lin
7 Wiegenlied op.98-2	17 Menuett G dur	27 Piano Sonate op.27-2 "Mondschein" 1st mov.	37 Barcarolle	47 Arabesque No.1
8 Grande Valse Brillante	18 Marcia alla Turca	28 Impromptu op.90-2	38 La prière d'une Vierge	48 Cakewalk
9 Polonaise op.53 "Héroïque"	19 Piano Concerto No.1 op.11 2nd mov.	29 Frühlinglied op.62-6	39 Liebesträume No.3	49 Je te veux
10 La Campanella	20 The Nutcracker Medley	30 Fantaisie-Impromptu	40 Blumenlied	50 Gymnopédies No.1

2 Voice settings

PIANO/VOICE +

Voices **Reverb Types** **Reverb Depth** **VRM** **Binaural** **Grand Expression Modeling** **Duo Type** **Volume Balance (Dual/Duo mode)** **Octave Shift (Dual/Duo mode)** **Touch Sensitivity**

A#1 C#0 D#0 F#0 G#0 A#0 C#1 D#1 F#1 G#1 A#1 C#2 D#2 F#2 G#2 A#2 C#3 D#3 F#3 G#3 A#3 C#4 D#4 F#4 G#4 A#4 C#5 D#5 F#5 G#5 A#5 C#6 D#6 F#6 G#6 A#6

CFX Grand Pop Grand DX E.Piano Harpsichord Pipe Organ Strings Recital Hall Chamber Off 1 step down 1 step up Off Off Static Balance 1 step down 1 step up -1 (Voice 2) +1 (Voice 2) -1 (Voice 1) +1 (Voice 1) Soft Hard

A-1 B-1 C0 D0 E0 F0 G0 A0 B0 C1 D1 E1 F1 G1 A1 B1 C2 D2 E2 F2 G2 A2 B2 C3 D3 E3 F3 G3 A3 B3 C4 D4 E4 F4 G4 A4 B4 C5 D5 E5 F5 G5 A5 B5 C6 D6 E6 F6 G6 A6 B6 C7

Clavinova CLP-825 Quick Operation Guide

3 Metronome settings

Voice confirmation of current Tempo value

Tempo (Metronome, Songs, etc.)

Metronome Beat

Metronome Volume

METRONOME +

A#-1 B-1 C0 D0 E0 F0 G0 A0 B0 C1 D1 E1 F1 G1 A1 B1 C2 D2 E2 F2 G2 A2 B2 C3 D3 E3 F3 G3 A3 B3 C4 D4 E4 F4 G4 A4 B4 C5

1 2 3 4 5 6 7 8 9 0

10 steps down 10 steps up

0 2 4 6

1 step down 1 step up

To increase the value by 1:

To decrease the value by 1:

4 Other settings

Operation Confirmation Sounds

Auto Power Off

Voice confirmation of current system version

Tuning

Bluetooth

IAC Depth

Transpose

Local Control

Program Change

Control Change

MIDI Transmit Channel

MIDI Receive Channel

Speaker

Audio Loopback

Volume Limiter

DEMO/SONG +

PIANO/VOICE

On

Disable

440.0 Hz

442.0 Hz

On

Off

1 step down 1 step up

Default setting

-6 -4 -2

0 (normal pitch) +1 +3 +5

On/Off

On/Off

1 step down 1 step up

Off

1 step down 1 step up

Ch 1 Ch 1 Ch 1+2

ALL

Off

Normal

Off

On

Off

On

Off

20% 50% 80%

A#-1 B-1 C0 D0 E0 F0 G0 A0 B0 C1 D1 E1 F1 G1 A1 B1 C2 D2 E2 F2 G2 A2 B2 C3 D3 E3 F3 G3 A3 B3 C4 D4 E4 F4 G4 A4 B4 C5 D5 E5 F5 G5 A5 B5 C6 D6 E6 F6 G6 A6 B6 C7

5 Tuning settings

To tune up (in about 0.2 Hz steps):

To tune down (in about 0.2 Hz steps):

Default pitch: 440.0 Hz

6 Duo setting

To turn Duo on or off:

7 Bluetooth (Audio) Pairing

Start pairing: