



CLP-885, CLP-875, CLP-845, CLP-835, CLP-895GP, CLP-865GP Firmware Update Guide

■ Preparing the firmware file

- 1. Prepare a USB flash drive with sufficient free space for the firmware file.**
- 2. Copy the firmware file for your instrument to the root directory of the USB flash drive.**

Model	Firmware file
CLP-885	CLP-885SETUP.PRG
CLP-875	CLP-875SETUP.PRG
CLP-845	CLP-845SETUP.PRG
CLP-835	CLP-835SETUP.PRG
CLP-895GP	CLP-895GPSETUP.PRG
CLP-865GP	CLP-865GPSETUP.PRG

■ Updating the firmware

NOTICE


- Do not turn off the instrument during the update.
- Do not disconnect the USB flash drive from the instrument.

If there are any difficulties or problems that arise during the firmware update, refer to the [Troubleshooting](#) section on the next page.


1. Make sure that the power of the instrument is turned off.
2. Connect the USB flash drive with the firmware file to the USB [TO DEVICE] terminal.
3. CLP-885/CLP-875/CLP-895GP: While holding down the B-1 key (the second white key from the left end), turn on the instrument.

CLP-845/CLP-835/CLP-865GP: While holding down the [PLAY/PAUSE] (▶/⏸) button, turn on the instrument.


Keep holding down the B-1 key or the [PLAY/PAUSE] (▶/⏸) button until the following display is shown.

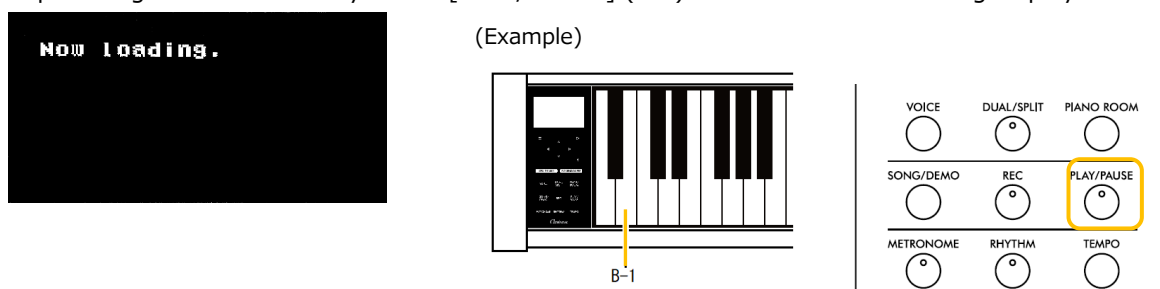

4. Press the [PLAY/PAUSE] (▶/⏸) button when the following display is shown.

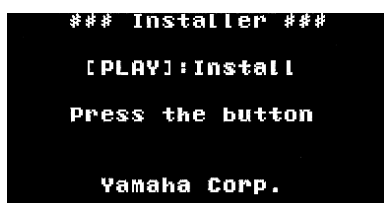

5. Press the [PLAY/PAUSE] (▶/⏸) button again to start installation when the following display is shown.

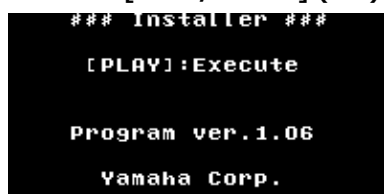


The firmware update installation starts.



The display shows the installation progress.

Note that the installation may take around 30 minutes for large firmware data.

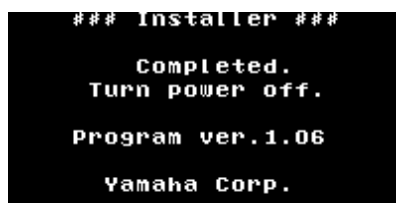

When the update is completed, the display shows the installed version.


6. Turn off the power of the instrument.

After turning the instrument off, you can disconnect the USB flash drive.

7. While holding down the highest key, turn on the power of the instrument.

NOTICE

This operation resets the instrument to its factory default settings. (The MIDI Songs saved to the instrument will not be lost.)

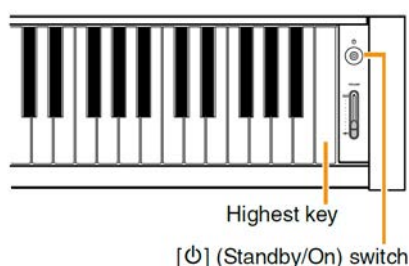

The firmware update is now complete.

You can check the firmware version from "Utility" > "Version" in the System menu.

■ Troubleshooting

- **The power was turned off or the USB flash drive was disconnected during the firmware update.**

You need to install the firmware again. Go back to the first step, and then follow all the steps to the finish.

- **An error message is displayed and the installation aborts.**

Check the following points

- ☐ Is the USB flash drive connected correctly?
- ☐ Is the USB terminal clean and free from dust or dirt?
- ☐ Is the firmware file located in the root directory of the USB flash drive?
- ☐ Is the firmware file the correct one for your instrument?
- ☐ Is the USB flash drive data corrupt, or is the USB flash drive itself broken? Try installing again with a different USB flash drive.